

DATA STREAM M TRUSS

Illusioncad

DESIGNED FOR CANADA 🙌



UNIVERSE




DMX DISTRIBUTOR USER MANUAL


Congratulations on purchasing your new DMX distributor. The unit has one input and six outputs. Completely electric isolation between input and output, DMX connector (3pin) for each individual channel, each DMX output features an independent driver. There is a signal indicating lcd. We strongly recommend that you take time to read this manual fully before you attempt to use the DMX distributor.

1. Technical specification

Power input AC88~256V 5	50/60Hz
Fuse(internal) T2	2A 250V
Dimension	130MM
Weight	0.9 KG


Front and rear panel instruction

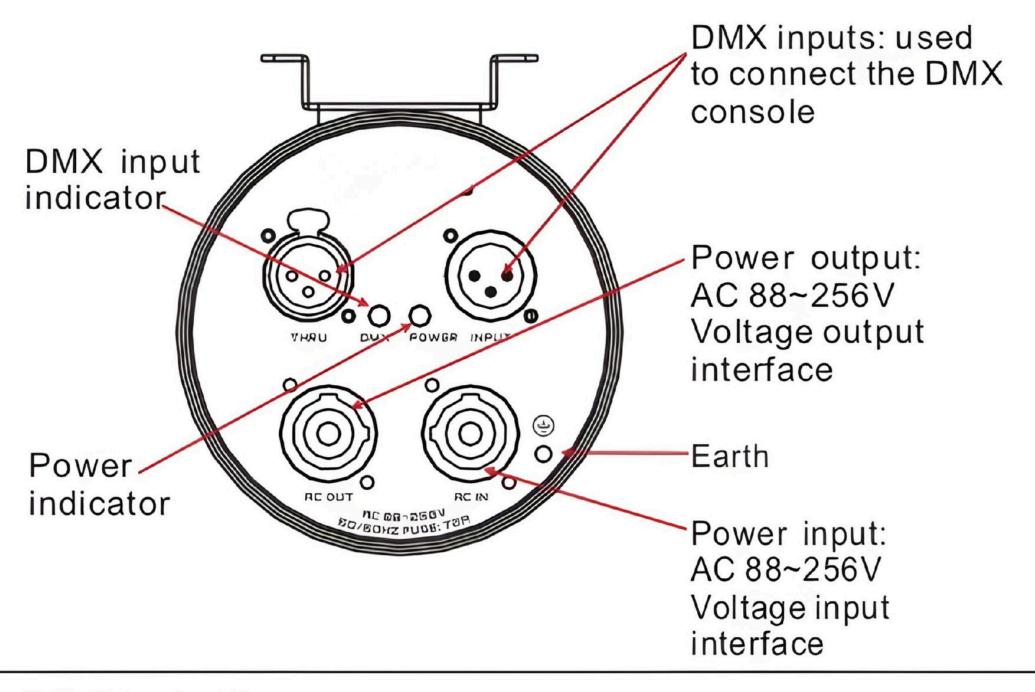


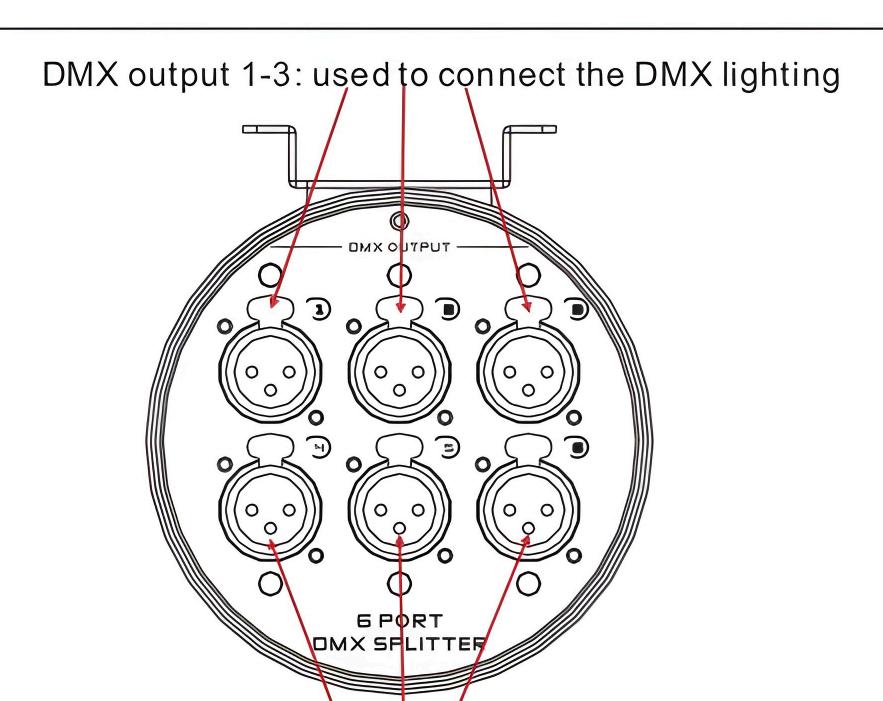

DMX output 4-6: used to connect the DMX lighting


XLR connector assign meit

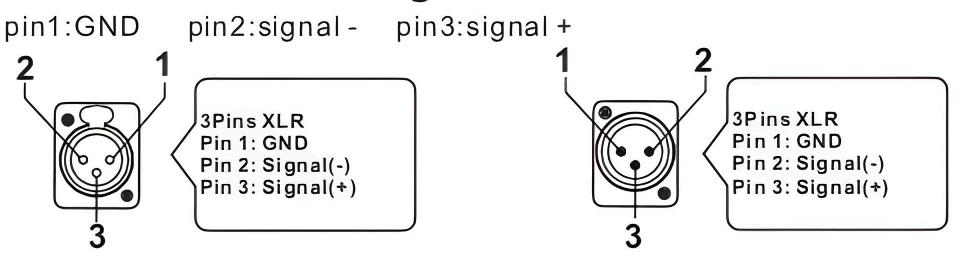

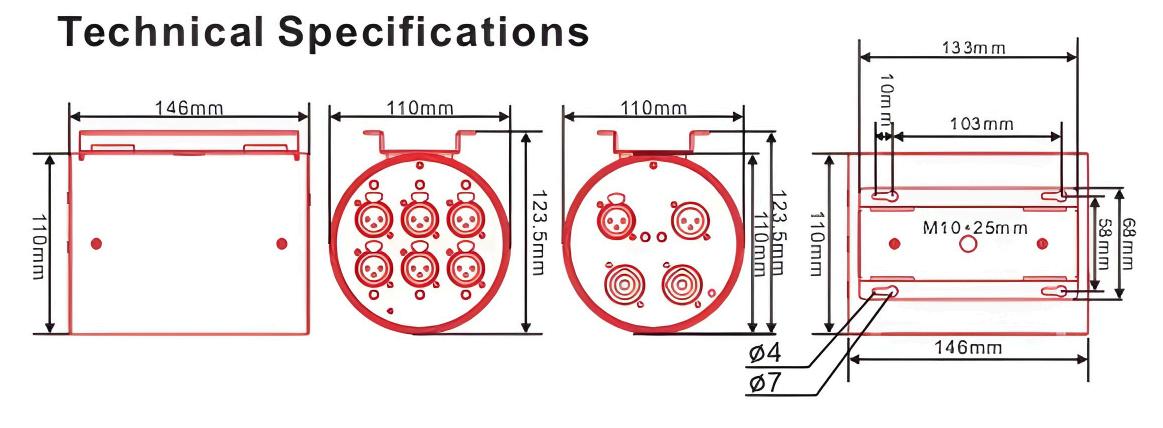


Connection justructhor:

1. Connect to DMX console directcy

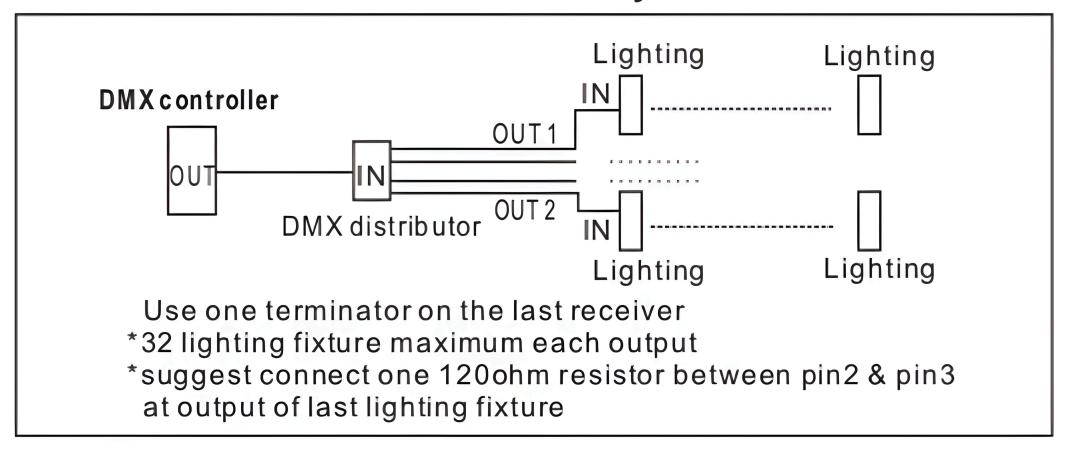

2. Connect to lighting fhxture

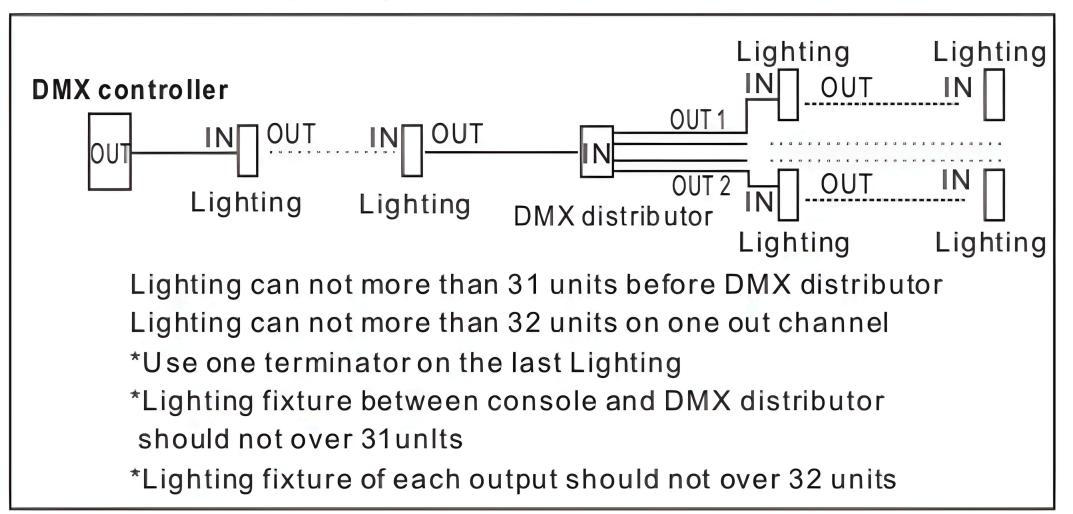

🛕 Fixture:

This apparatus must be grounded.

Do not apply power on before installation be finished completely.

Always disconnect from mains before replacing the fuse.

To reduce risk of fire or electrical shock. Do not expose it I it the rain moisture.

Do not try to repair it when the circuit is out of order. Send it back to your supplier for repairing.



Contact Us

- SALES@ILLUSIONUNIVERSE.CA
- UNIT 11, 10 FALCONER DRIVE,
 MISSISSAUGA, ONTARIO, CANADA
- WWW.ILLUSIONUNIVERSE.CA