Rumble
M3 BEAM



RUMBLE
M3 BEAM


/ illusioncad

DESIGNED FOR CANADA

ILLUSION
UNIVERSE

www.illusionuniverse.ca

RUMBLE M3 BEAM

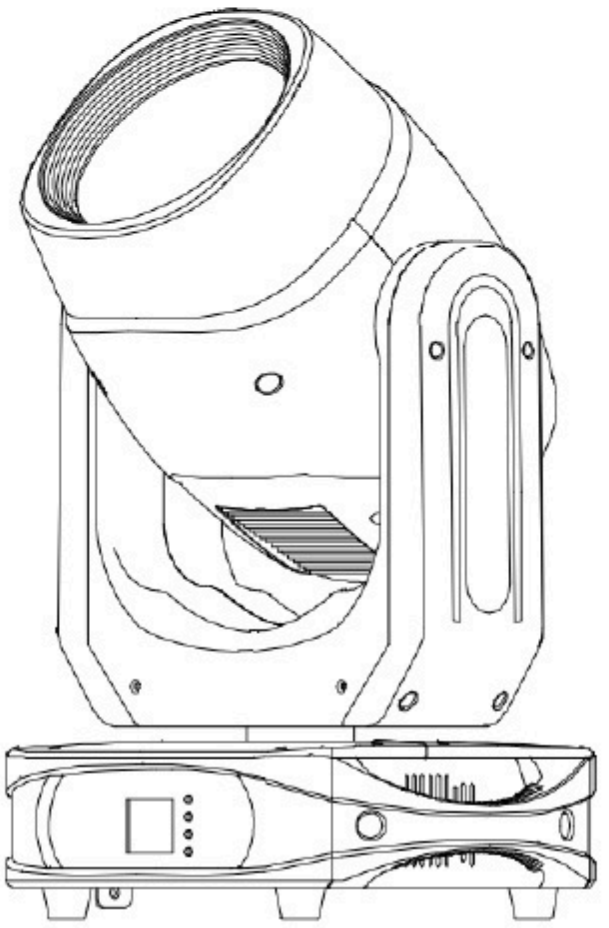

USER MANUAL

Table of Contents

Safety Information	2
Size and weight	3
Main Control Menu	4
DMX Profile	4
Cleaning and Maintenance	6

Check that the unit has not been damaged during transport




Protection Against Fire



1. Maintain a minimum of 1 foot distance from any type of flame.
2. For indoor use only do not expose unit to rain or moisture.
3. Replace fuse only with the specified type and rating.
4. Do not install the unit to close to a heat source.
5. Make sure cable are properly secured
6. Maximum surface operating temperature 130º.

Protection Against Electrical Fire

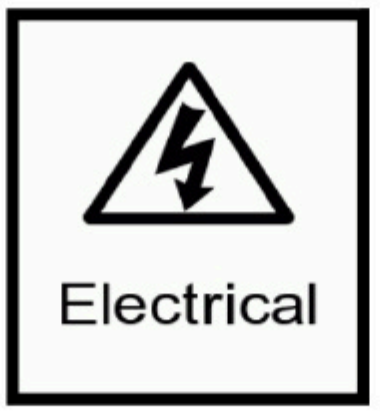


1. Disconnect power before servicing.
2. For connection to main power supply proceed to page 5.
3. This unit must be earthed. (electronically grounded)
4. This fixture must not be left on for long periods of time.


Protection Against Mechanical Hazards





1. Use secondary safety chain when hanging unit.
2. Use quality clamps or bolts when positioning unit
3. Do not open unit while it is on, risk of electrical shock.

Size and Weight

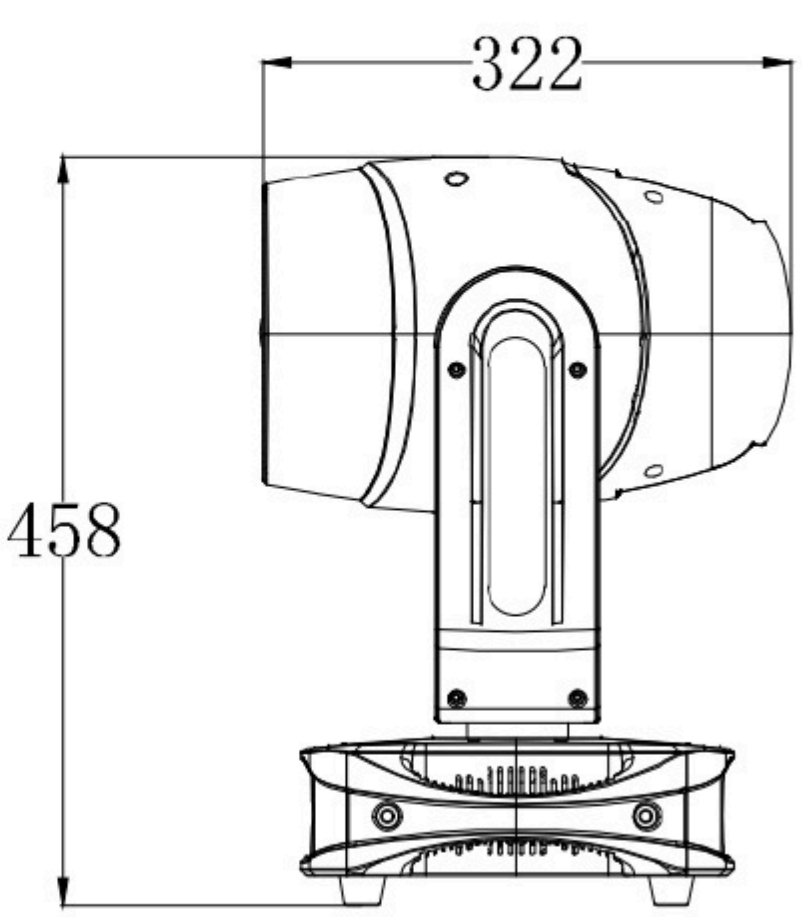

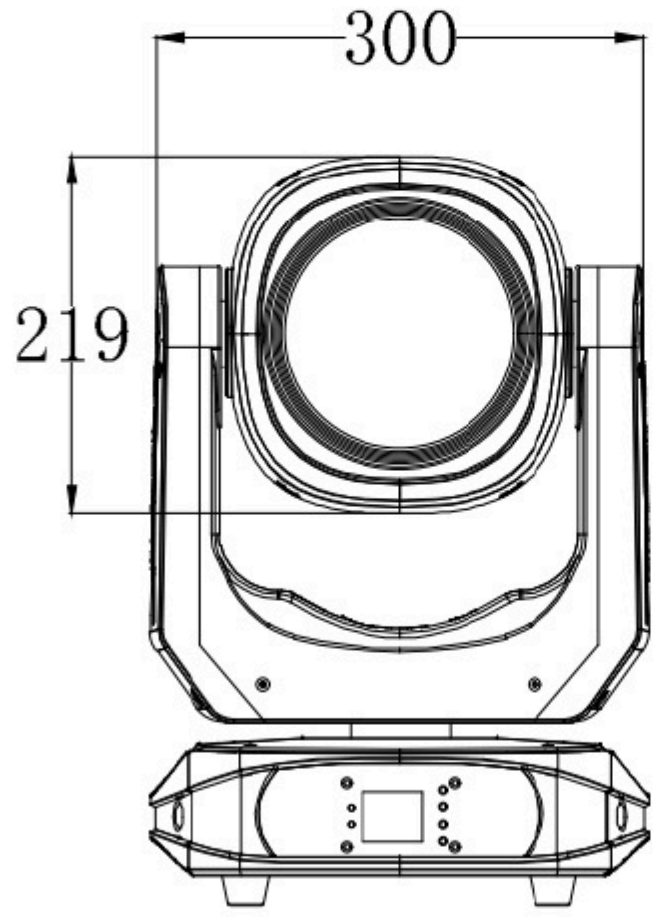


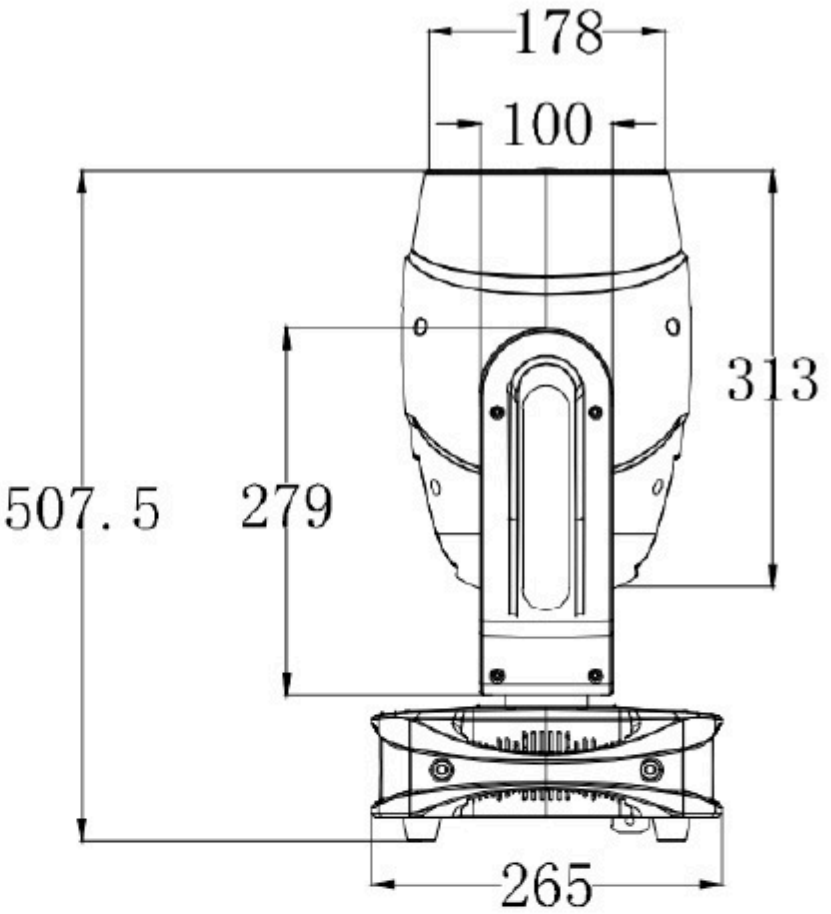

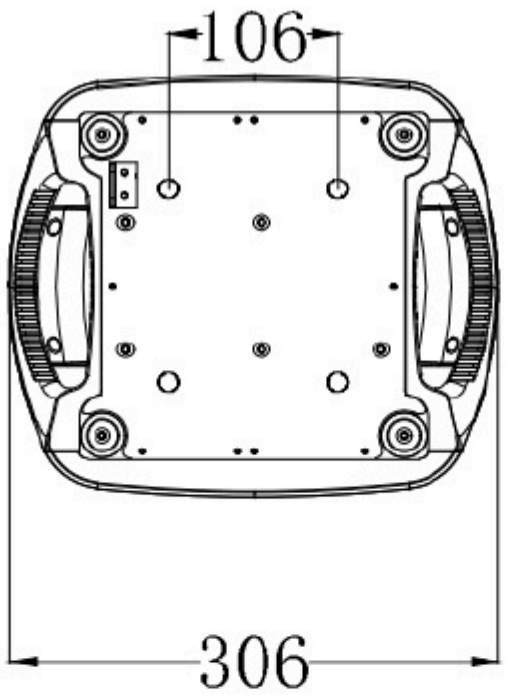

Size	306×507×265mm
Weight	14kg
Packaged	540×410×415mm 16kg

Main Control Menu

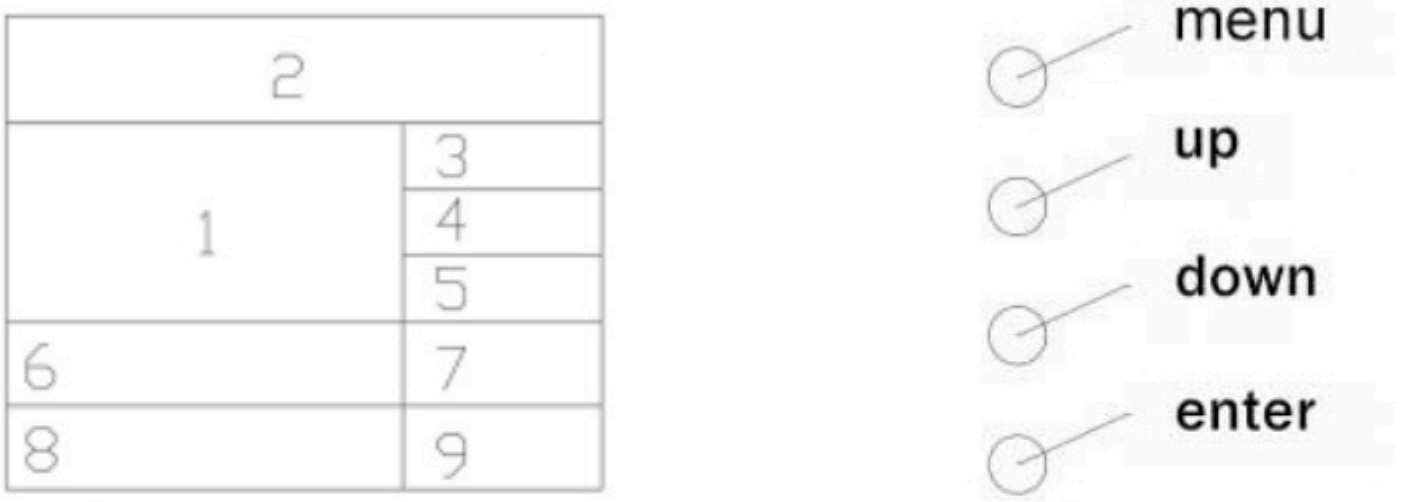

1 — Current DMX add

2 — Customer logo

3 — DMX signal (FPS)

4 — Current DMX channel number

5 — RPM of fan

6 — Current Mode (master/slave)

7 — DMX Mode (DMX512、AUTO、USER)

8 — Error. ”X” means means found mistake (press “down”key to check the info)

9 — SN

DMX Profile

16CH mode

CH	DMX Code	Description
1		**Colour**
	0-127	Choose color
	128-190	Rainbow effect from fast to slow
	191-192	Rainbow effect stop
	193-255	Rainbow effect from slow to fast
2		**Strobe**
	0-3	Close
	4-103	Strobe speed from slow to fast
	104-107	Open
	108-207	Fast OFF slow ON, from fast to slow
	208-212	Open
	213-251	Random strobe from slow to fast
	252-255	Open

3		**Dimmer**
	0-255	Linear dimmer from 0% to 100%
4		**Gobo**
	0-3	Open
	4-51	Choose gobo
	52-190	Choose gobo and shake, from fast to slow
	191-201	Open
	202-227	Gobos forward roll, from fast to slow
	228-229	Stop roll
	230-255	Gobos reverse roll, from slow to fast
5		**Prism 1**
	0-127	No function
	128-255	Prism 1
6		**Prism 2**
	0-127	No function
	128-255	Prism 2
7		**Prism 1 location and rotation**
	0-127	Prism 1 location and rotation
	128-190	Prism 1 reverse roll, from fast to slow
	191-192	Prism 1 stop rotation
	193-255	Prism 1 forward roll, from slow to fast
8		**Frost**
	0-63	Blank
	64-255	Forst
9		**Focus**
	0-255	Focus from far to close
10		**Pan**
	0-255	Pan rotation
11		**Pan Fine**
	0-255	Pan Fine
12		**Tilt**
	0-255	Tilt rotation
13		**Tilt Fine**
	0-255	Tilt Fine
14		**Pan/Tilt Speed**
	0	Fastest speed
		Speed mode
	1-255	Speed from fast to slow

		Time mode
	1-255	Time from 0.1sto 25.5s
15		**Reserved**
16		**Reset**
		Push to the according value and keep st least 4s
	130-139	ON
	140-199	No function
	200-209	Pan/Tilt reset
	210-219	Effect reset
	220-229	Reset all
	230-239	OFF
	240-255	No function

All information is subject to change without prior notice.

Cleaning and Maintenance

Installation Maintenance: The operator has to make sure that the unit is operating safely and has the installations and electronics checked by an expert every 2 years.
The following points have to be considered during the inspection:
All screws used for installing the device or part of the device have to be tightly connected and must not be corroded.
There must not be any deformations on the housing, fixation and installation spots (ceiling, suspension, trussing).
The electronic power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments.Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

Note: There is no serviceable parts inside the device. Maintenance and service operations are to be carried out by au-thorized dealers.
Replacing the fuse: When possible only replace the fuse with the same type and rating.
Replacing the power cable: If the power cable of this device becomes damaged, it has to be replaced by authorized dealers or trained professional only.
Cleaning: Only clean the fixture using a damp cloth.

Should you have further questions , please contact your dealer.

ILLUSION UNIVERSE

Contact Us

SALES@ILLUSIONUNIVERSE.CA

UNIT 11, 10 FALCONER DRIVE,
MISSISSAUGA , ONTARIO, CANADA

WWW.ILLUSIONUNIVERSE.CA